 


RADDLE

WW7200 WW7203
WW7201 WW7204
WW7202 WW7205

ASSEMBLY INSTRUCTIONS

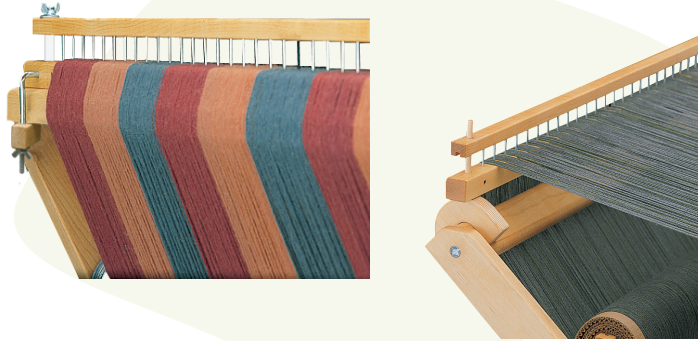

PARTS

1 – raddle top
1 – raddle base with pins
installed every 1"

EXTRA RADDLE PINS

Wolf Pup – 19 pins
Baby Wolf and 26" – 27 pins
Mighty Wolf – 36 pins
up to 40" warps – 40 pins
up to 48" warps – 48 pins

FOR WOLF LOOMS WITH SQUARE BEAMS

2 – U-brackets with 1/4" posts
2 – long rubber bands

FOR LOOMS WITH OVAL BEAMS

2 – raddle clamps
2 – 1/4" wing nuts
2 – 1/4" washers
2 – 3" machine screws
2 – nylon spacers

RADDLE ASSEMBLY INSTRUCTIONS

ASSEMBLY FOR LOOMS WITH SQUARE BEAMS

Center the raddle on the rear square beam of the loom. Insert the clamps into the holes on each end of the raddle. Tighten the wing nuts to secure the raddle to the beam (figure 1).

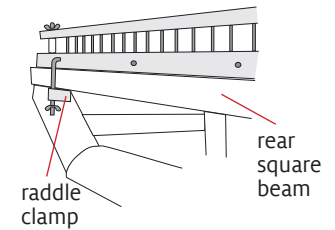


FIGURE 1

ASSEMBLY FOR WOLF LOOMS WITH OVAL BEAMS

Special brackets are used to mount the raddle on the oval back beam of the Wolf looms. Replace the bolts at each end of the raddle with the metal posts of the U-brackets, as follows:

- remove the wing nuts and washers from the top of each end of the raddle.
- use a phillips-head screwdriver to remove each bolt and nylon spacer.
- insert the metal post of the U-brackets into each bolt hole.
- set the bracket/raddle assembly onto the rear oval beam of the Wolf loom with the shorter end of the U-bracket under the beam (see figure 2).
- secure each bracket with a long rubber band (see figure 2).

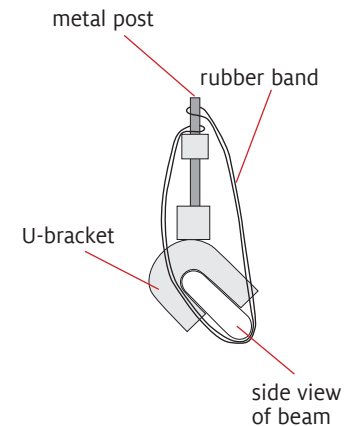


FIGURE 2

RADDLE PINS

The holes for the pins have been pre-drilled at 1/2" intervals, and pins are inserted in half of the holes, to make 1" intervals. The center pin has been painted black to mark the center of the raddle.

If you prefer 1/2" intervals, extra pins are included for the empty holes. To install the pins, loosen the wing nuts and remove the top of the raddle. Place the raddle on a sturdy surface such as kitchen counter. Gently tap the pins into the holes with a hammer.



Find out more at schachtspindle.com
Schacht Spindle Co., Inc. 6101 Ben Place Boulder, CO 80301
p. 303.442.3212 800.228.2553 f. 303.447.9273

RADDLE

WW7200 WW7203
WW7201 WW7204
WW7202 WW7205

ASSEMBLY INSTRUCTIONS



PARTS

1 – raddle top
1 – raddle base with pins
installed every 1"

EXTRA RADDLE PINS

Wolf Pup – 19 pins
Baby Wolf and 26" – 27 pins
Mighty Wolf – 36 pins
up to 40" warps – 40 pins
up to 48" warps – 48 pins

FOR WOLF LOOMS WITH SQUARE BEAMS

2 – U-brackets with 1/4" posts
2 – long rubber bands

FOR LOOMS WITH OVAL BEAMS

2 – raddle clamps
2 – 1/4" wing nuts
2 – 1/4" washers
2 – 3" machine screws
2 – nylon spacers

RADDLE ASSEMBLY INSTRUCTIONS

ASSEMBLY FOR LOOMS WITH SQUARE BEAMS

Center the raddle on the rear square beam of the loom. Insert the clamps into the holes on each end of the raddle. Tighten the wing nuts to secure the raddle to the beam (figure 1).

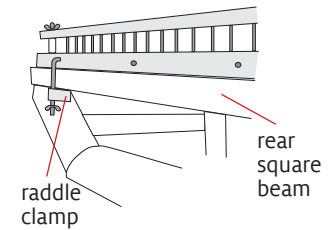 


FIGURE 1

ASSEMBLY FOR WOLF LOOMS WITH OVAL BEAMS

Special brackets are used to mount the raddle on the oval back beam of the Wolf looms. Replace the bolts at each end of the raddle with the metal posts of the U-brackets, as follows:

- remove the wing nuts and washers from the top of each end of the raddle.
- use a phillips-head screwdriver to remove each bolt and nylon spacer.
- insert the metal post of the U-brackets into each bolt hole.
- set the bracket/raddle assembly onto the rear oval beam of the Wolf loom with the shorter end of the U-bracket under the beam (see figure 2).
- secure each bracket with a long rubber band (see figure 2).

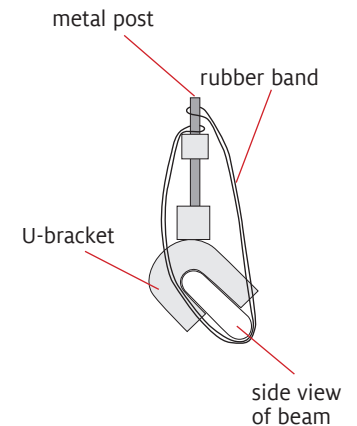 


FIGURE 2

RADDLE PINS

The holes for the pins have been pre-drilled at 1/2" intervals, and pins are inserted in half of the holes, to make 1" intervals. The center pin has been painted black to mark the center of the raddle.

If you prefer 1/2" intervals, extra pins are included for the empty holes. To install the pins, loosen the wing nuts and remove the top of the raddle. Place the raddle on a sturdy surface such as kitchen counter. Gently tap the pins into the holes with a hammer.



Find out more at schachtspindle.com
Schacht Spindle Co., Inc. 6101 Ben Place Boulder, CO 80301
p. 303.442.3212 800.228.2553 f. 303.447.9273

©2018 Schacht Spindle Co., Inc.

03.18