


YARDAGE COUNTER

INSTRUCTIONS

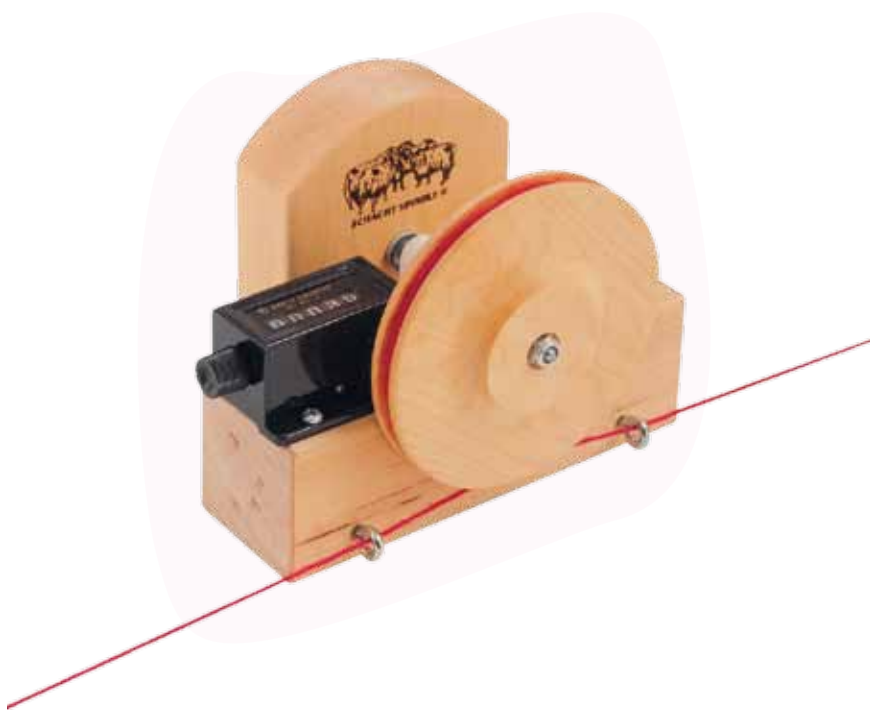


Find out more at schachtspindle.com
Schacht Spindle Company 6101 Ben Place Boulder, CO 80301
p. 303.442.3212 f. 303.447.9273
© 2011 Schacht Spindle Company, Inc.

YARDAGE COUNTER

INSTRUCTIONS

PARTS

- 1 - Yardage Counter
- 1 - 5/64 hex wrench
- 1 - table clamp

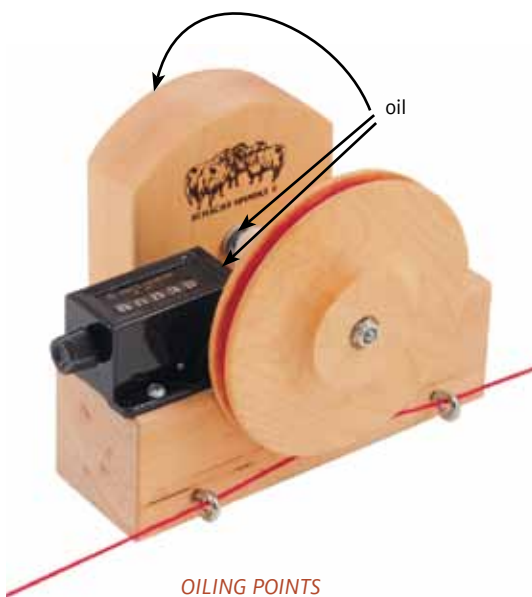


The circumference of the yardage counter wheel is one foot, therefore three revolutions of the wheel measures one yard.

USING THE YARDAGE COUNTER

- Clamp the yardage counter to a table, insert the clamp in the center hole H and tighten the wing nut until snug.
- To thread your yarn onto the yardage counter, first go through screw eye A, then under and around the counter wheel and then through screw eye B. The thread goes around the wheel in a clockwise direction. See the illustration below.

- To reset the counter to zero, turn the reset knob counterclockwise until the counter reads all zeros.
- As you wind, hold the yarn somewhere between the yarn source and screw eye A to add a little tension as it enters the wheel.

Your yardage counter requires periodic oiling. Place a drop of light oil such as sewing machine oil at the points indicated on the drawing to the left. Oil the bearing behind the gear of the number counter and the front and rear bearing points of the wheel shaft.

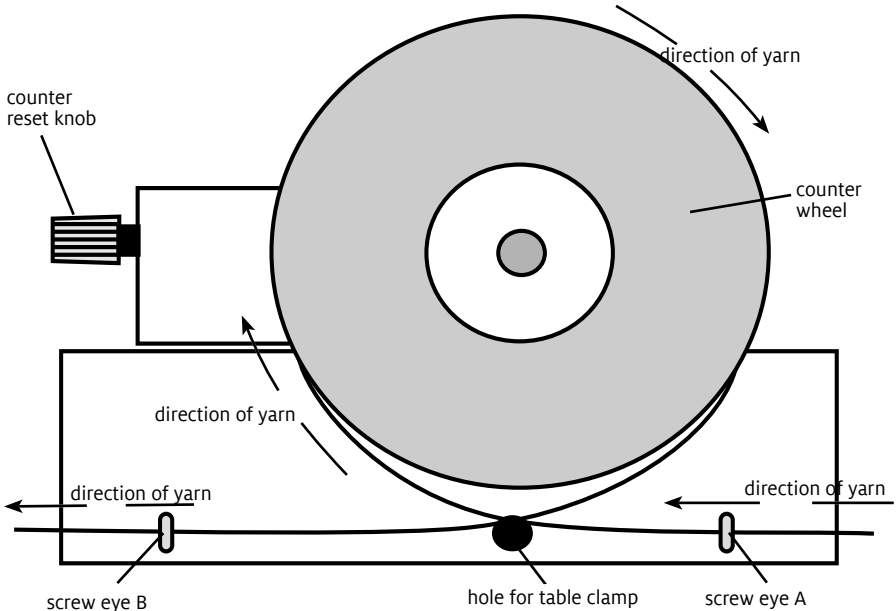

OTHER WEAVING ACCESSORIES



Tension Box



Wolf Trap



Sectional Back Beam



Spool Rack



Horizontal and Vertical Warping Mills